
Parts Information:

Cordless Circular Saw Ø85mm 10.8V SV10.8 Series - Body Only

Model No: CP108VCSBO

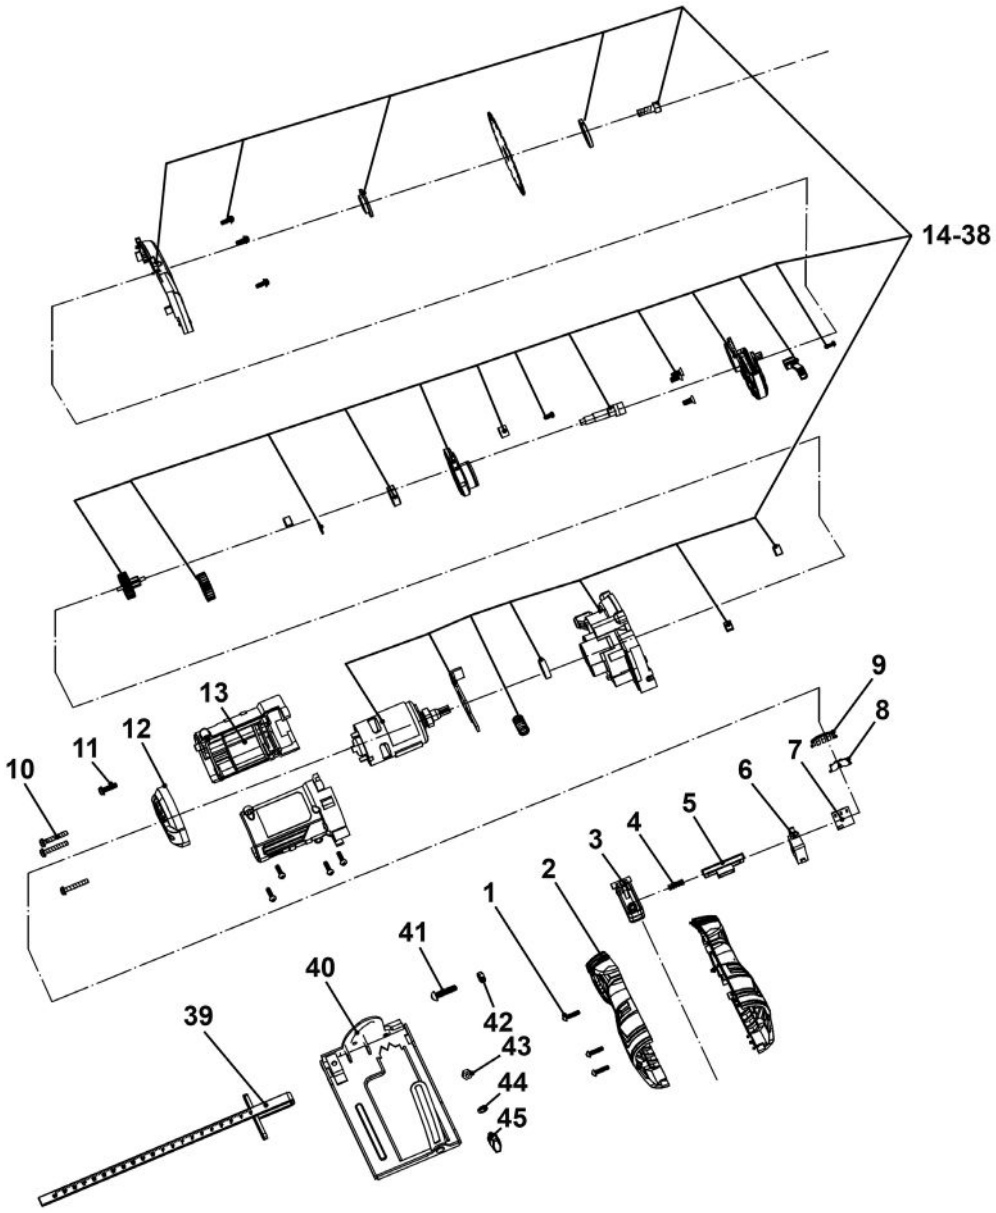

Item	Part No.	Description	Qty
1	CP108VCSBO.01	Housing Screw	9
2	CP108VCSBO.02	Handle Complete	1
3	CP108VCSBO.03	Trigger	1
4	CP108VCSBO.04	Trigger Spring	1
5	CP108VCSBO.05	Lever	1
6	CP108VCSBO.06	Microswitch	1
7	CP108VCSBO.07	PCB	1
8	CP108VCSBO.08	Indicator Holder	1
9	CP108VCSBO.09	Cover	1
10	CP108VCSBO.10	Screw M4 x 25mm	1
11	CP108VCSBO.11	Screw M4 x 15mm	3

Item	Part No.	Description	Qty
12	CP108VCSBO.12	Back Cover	1
13	CP108VCSBO.13	Housing (Inner)	1
14-38	CP108VCSBO.14-38	Motor/Gearbox Assembly	1
39	CP108VCSBO.39	Guide Ruler	1
40	CP108VCSBO.40	Base Plate	1
41	CP108VCSBO.41	Screw M6 x 30mm	1
42	SN6.S	Steel Nut M6 Zinc	1
43	SN4.S	Steel Nut M4 Zinc	1
44	FWM4.S	Flat Washer M4	3
45	CP108VCSBO.45	Tension Knob	3
--	CP108VCSBO.46	Wrench (Not Shown)	--

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.

IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR

01284 757500 | sales@sealey.co.uk | www.sealey.co.uk