
SEALEY™

Parts Information:
SV10.8 Series Cordless Pruning Saw 10.8V - Body Only
Model No: CP108VPSBO

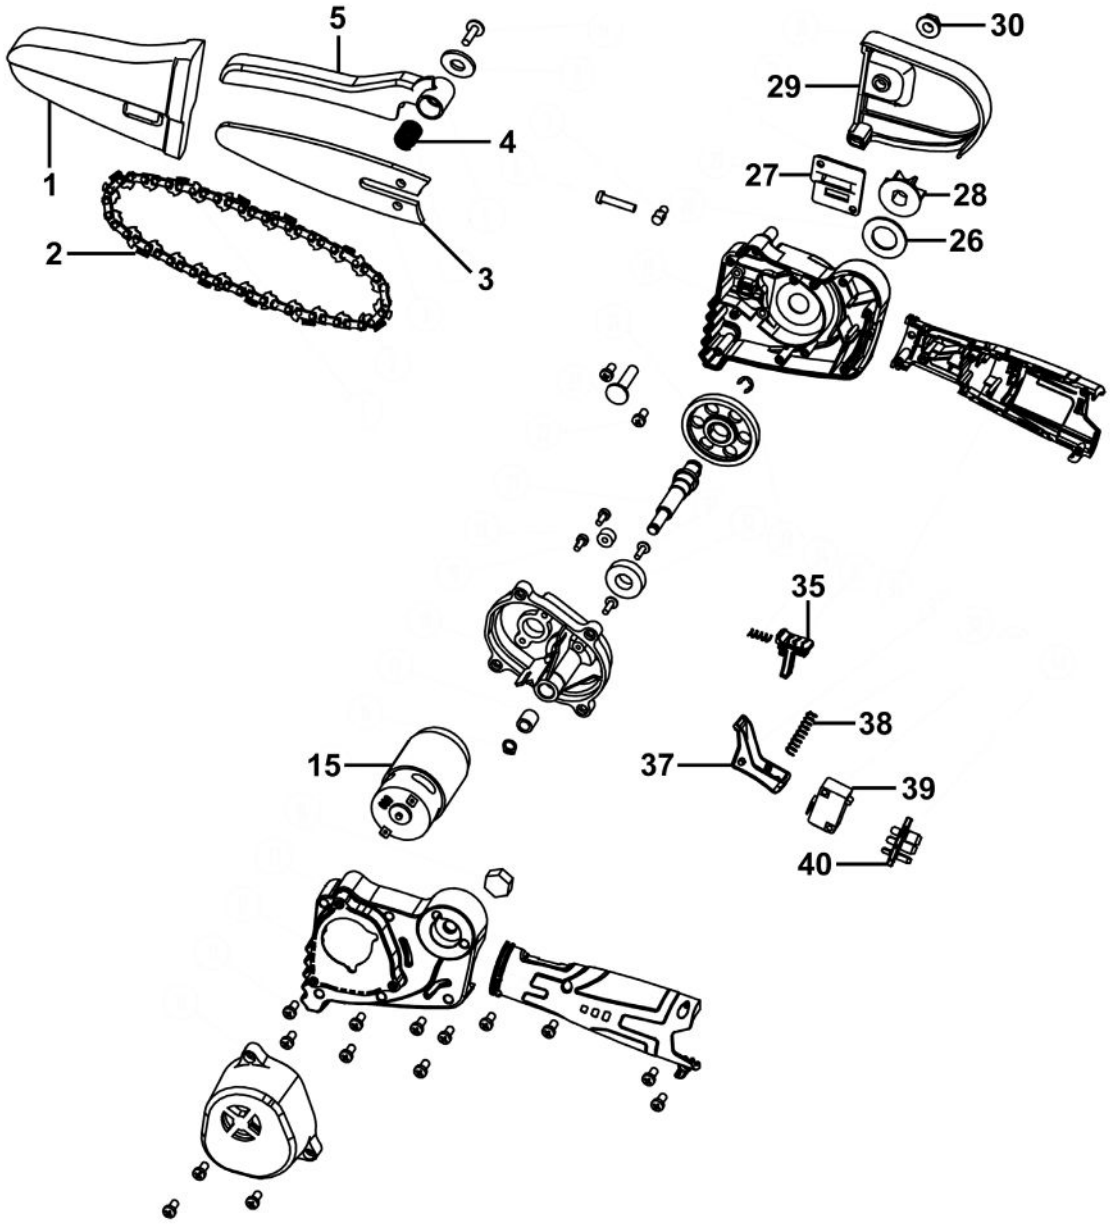

Item	Part No.	Description	Qty
1	CP108VPSBO-01	Guide Protector Sleeve	1
2	CP108VPSBO-02	Chain 4"	1
3	CP108VPSBO-03	Guide Plate 4"	1
4	CP108VPSBO-04	Chain Cover Torsion Spring	1
5	CP108VPSBO-05	Chain Cover	1
15	CP108VPSBO-15	Motor	1
26	CP108VPSBO-26	Wool Felt Ø15x26.3x1.5	1
27	CP108VPSBO-27	Guide Plate	1

Item	Part No.	Description	Qty
28	CP108VPSBO-28	Sprocket Wheel	1
29	CP108VPSBO-29	Guide Cap	1
30	FN6.S	Flange Nut Serrated M6 Zinc	1
35	CP108VPSBO-35	Trigger Button	2
37	CP108VPSBO-37	Push Button	1
38	CP108VPSBO-38	Push Button Spring	1
39	CP108VPSBO-39	Microswitch	2
40	CP108VPSBO-40	Battery Connection Plate	1

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice. There may be alternative versions of this product, please contact us should you require this information.
IMPORTANT: No liability is accepted for incorrect use of product. Spare parts must be fitted by a competent person
WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR
01284 757500 | sales@sealey.co.uk | www.sealey.co.uk